 


Instruction manual FSW-W 85 & FSW-W 85 E



- 1.**
Warning: Use the system only on level floors!



General important remarks:

**This type of floor stand has electric retractable wheels.
With a push on the button the floor stand will raise from the floor.**

**Use the system only with caution, beware of obstacles on the floor
and your feet when activating the system.**

**Systems which are transported international come with a removed
column, it needs to be installed before use.**

Important to know:

**The wheels will only retract, when they are positioned in the right
direction (driving direction).**

2. (only FSW-W85)

 
**Take the unit from the packaging and install the column on the floor
plate of the trolley.**

**Gently position it and fasten it through the bottom with the supplied
bolts.**

**To activate the wheel system plug-in the
power cord and push the activation button.**



**3.
Retracting the wheels.**

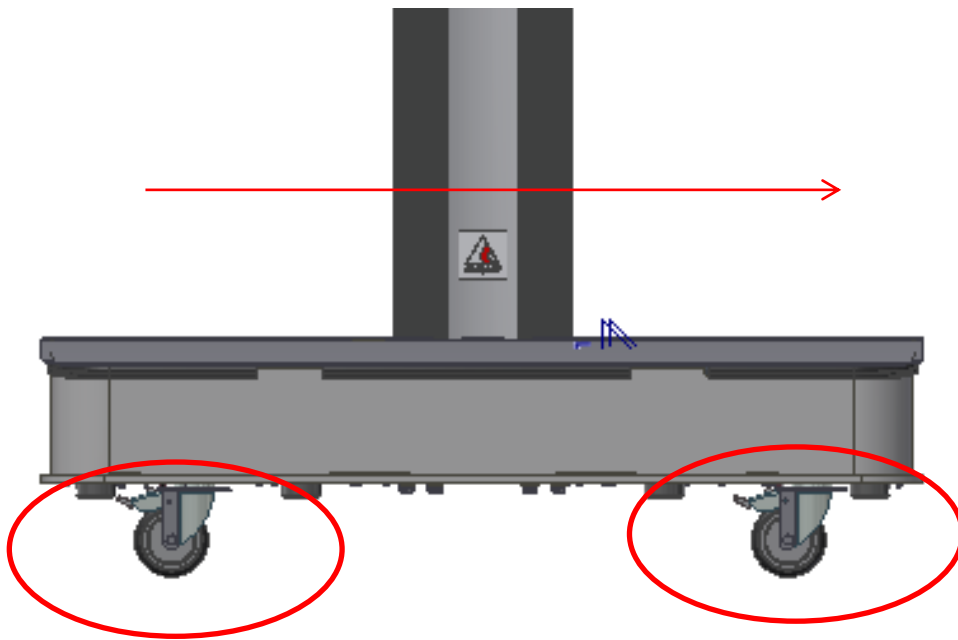

To retract the wheels it is important to have the wheels positioned in the correct direction. All wheels are detected by the electrical system and allow the system to descend.

Safety feature explanation:

If the wheels are reversed in direction and the system would lower, the sudden rotation of the wheels will give the lift a heavy shock downwards and an uncontrolled sudden descend of the unit. Danger for feet and obstacles under the unit will occur.

 
4. (FSW-W85 only)

Install the mounting head on the column. Simply slide the mounting head from the top down and lock it firmly with the 4 handles.



5. (FSW-W85E only)

The mounting head of the version with electric height adjustment is simply pushed up and down. As a safety feature the lifting column can not pull the screen down.

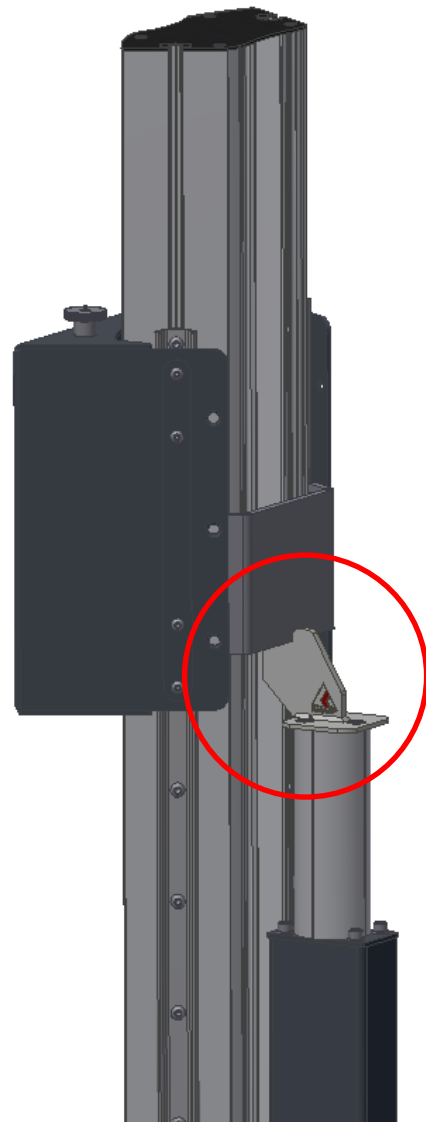


6.
Install the monitor bracket to the screen and use the L&S5 intrface to lock it ito the mounting head. Do not set the height of the screenwith the screen mounted to the system!



FAQ:

1. The wheels will not retract.
Position the wheels in the right direction and check if all 4 detection switches are activated.

 It might be possible the switches must be repositioned after a while. Remove the top cover of the floor stand and set the height position of the switch.

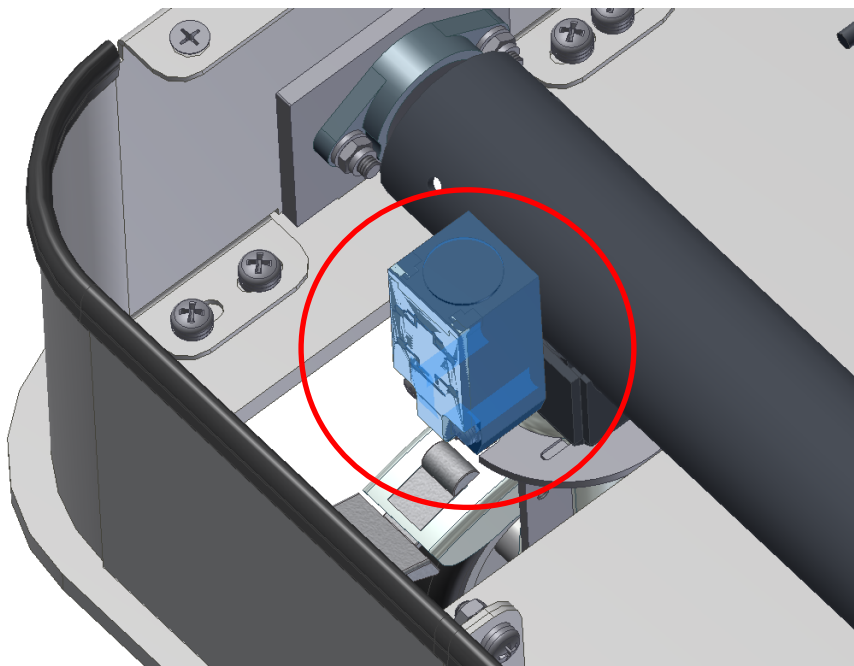

Audipack's general conditions of sales and delivery apply to all of Audipack's deliveries. These conditions can be downloaded from Audipack's website, www.audipack.com, or will be sent by post on request.

Audipack liefert ausschließlich unter die allgemeine Verkauf- und Lieferungsbedingungen von Audipack. Diese Bedingungen sind zum downloaden verfügbar auf die Webseite von Audipack, www.audipack.com, oder werden Ihnen auf Anfrage per Post gesendet.

Alle leveringen geschieden uitsluitend volgens de Algemene Verkoop- en Leveringsvoorwaarden van Audipack. Een afschrift hiervan kunt u downloaden van de website van Audipack, www.audipack.com, of wordt u op aanvraag gestuurd per post.

Les conditions de vente et de livraison de Audipack s'appliquent à tous les livraisons de Audipack. Cette conditions sont disponible sur le site internet de Audipack, www.audipack.com, où seront envoyé par poste sur demande.

AUDIPACK

Industriestraat 2-4
2751 GT Moerkapelle
the Netherlands

Tel: +31(0)795931671
Fax: +31(0)795933115
Email: audipack@audipack.com

www.audipack.com

Audipack reserves the right to make changes in specifications and other information contained in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Audipack be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Audipack has been advised of, known, or should have known, the possibility of such damages.