

Important note!

Before activating the system, remove the transport security screws at the back/front of the FTL lift.



1. Measure the body size of the FTL and make a cut out 2 mm bigger than measured.
2. Insert the FTL in the table cut-out and let it rest in the floor or fix it to the table top.
3. Plug in the power (230 VAC) and check the function of the lift.
The lift can be activated with the buttons on the top of the FTL finishing.
4. Connect the FTL via RS232 / 485 and control it with the provided codes.
5. Install the screen and connect it to the power cable and signal cable.
Connect then the HDMI in at the bottom front of the FTL.



Audipack®

It's great to have solutions...

Installation manual FTL series

Technical specifications:

Max. load 8.0 KG

Clamp security on table panel in closing direction

Max. Screen thickness 70 mm

VESA 75 – 100 mm

Settings:

RS485/232

Baud Rate: 9600

Data Length: 8

Parity Check: N

Stop Bit: 1

DOWN: **FF 10 11 00 DD** (repeat 5 times to enhance signal)

UP: **FF 10 11 00 EE** (repeat 5 times)

STOP: **FF 10 11 00 CC** (repeat 5 times)